 


NEXO

User Guide

Install IR Control

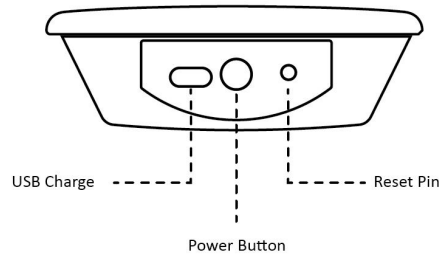


Basic device settings

AP mode

Hold your finger on the reset pin for 3 seconds. The IR Control enters the modem mode then you can start from Do it through the application.


Reset Device

Hold the Reset pin for 7 seconds. The IR Control will restart automatically.

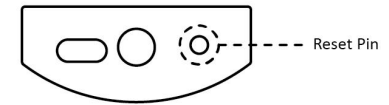

WiFi Light

- Slow flashing mode means the device is running. Trying to connect to the modem.
- Fast flashing mode means AP mode.
- When the Wi-Fi light is off, it means that IR Control is malfunctioning.

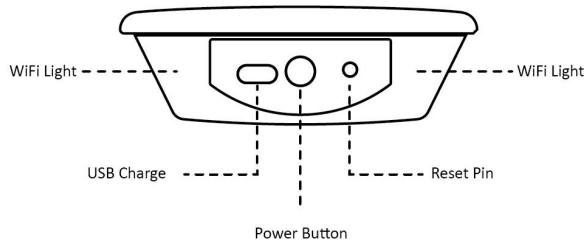

Safety Tips


- Before installing, be sure to disconnect the main power fuse.
- Use a phase meter or insulating screwdrivers and safety gloves to connect the IR Control.
- If necessary, be sure to get help from the installer to install the IR Control.
- Do not install the IR Control on worn and inefficient wiring.
- Prior to installation, make sure that the installation site is clean and not damp.

Warning!!


- Avoid connecting the IR Control to high power appliances.
- Do not install the device in humid environments separately.
- Avoid connecting the device to shared or anonymous modems.
- Do not install the switch in spaces with a temperature of more than 45 degrees.
- Change the device password at regular intervals for device security.
- Do not share your username and password with unknown individuals.

Connect switch to the application


- Download NEXO applications from reputable markets or company site.
- Install on your smartphone.
- Run the program and log in with the username and password received from the company.
- Touch the icon **+** from the left side of the app screen.

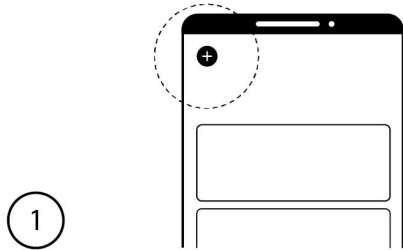

- Touch the scan QR button.
- Barcode scanning printed on IR Control.
- Receive and display device information.
- Touch the next button.

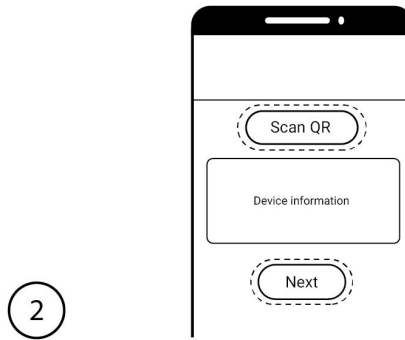


- Enter the following information as:
SSID ----- Modem name connected to your smartphone
Password ----- Modem connection password
- Touch the next button.

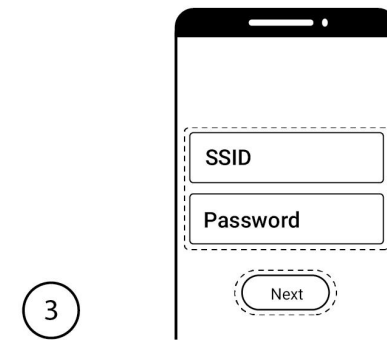


- Select the desired room of the IR Control

Select one of the default rooms after completing the device setup
Rooms are the editable location of choice.

- Touch the next button.

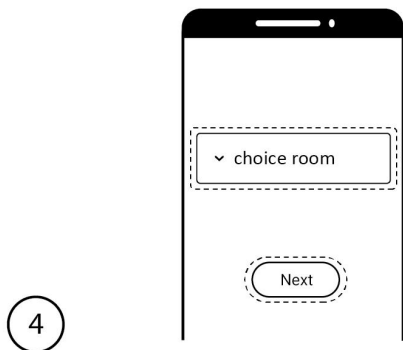

- Test the correct operation of the device by turning it on and off.
- Touch the next button.

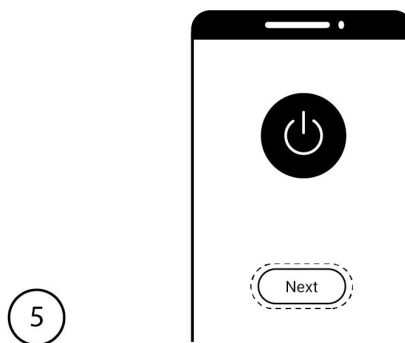

- The device has been successfully launched by displaying the tick icon.
- Touch the Finish button and enjoy working with the IR Control.

